Weft Break Detection: Weft Break Sensor : Works on All Models and Make of Circular Loom

- Stops Loom on weft break.
- Avoid fabric wastage.
- Avoid gap in fabric using cramming function.
- To cram fabric, clutch disconnects take up roller or loom controller reduce take up speed.

Different Mounting Arrangements



1) Universal set 12VDC sensor with Relay PCB and clamp



This is for 1 sensor. For 2 Sensors use dual relay PCB With Relay PCB



2) Direct Connectivity Option 24VDC Sensor PNP or NPN





- No Effect of Dust

Different Types of Magnet Holders Assemblies for Your Reference





- Specially Designed for Loom


Different Types of Clamps for Sensor Fitting Arrangements







Save Fabric Wastage on Loom



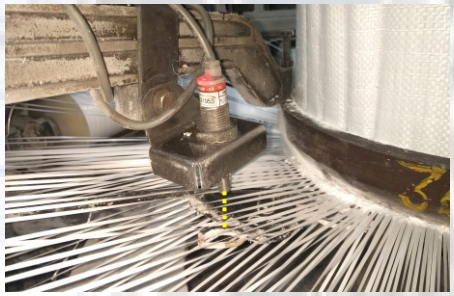

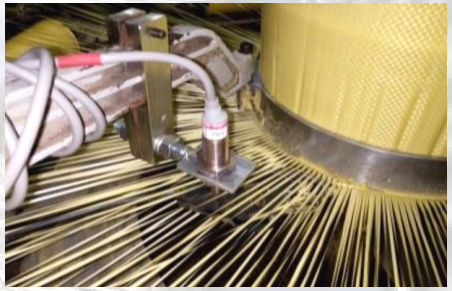

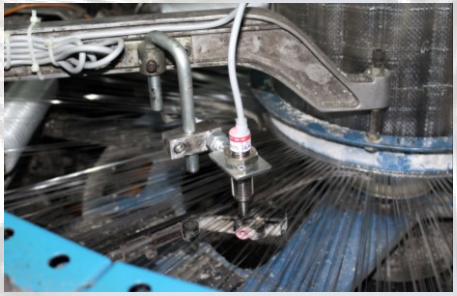

Beta Computronics Pvt. Ltd. 10/1 IT Park, Parsodi, Nagpur- 440022 (MS), INDIA
Phone: +91-712-2227125, 2240122, Mobile or WhatsApp : +91 - 9763711367
Website: www.betacomp.com E-mail: sandeep@betacomp.com, sales@betacomp.com

27 Years of Trust